

FINGER KICK

User's guide

Congratulations

You have just bought the perfect accessory which will help you throughout the education and the life of your dog.

Thanks to this **Hand Free Kit**, you attend to your affairs keeping the control of your dog.

This user's guide explains how to use the "**Finger Kick**" with the compatible remote.

The "**Finger Kick**" uses the transmitter as relay.

Thanks to the unique code given to the remote, it is strictly impossible to have interferences with similar equipment, or other transmitter used by a neighbour.

The "**Finger Kick**" has been successfully tested in extreme used conditions (from -20°C to $+60^{\circ}\text{C}$, as well as in the air than in the water).

Compatibility

The "**Finger Kick**" is compatible with the following remotes:

Tiny Trainer range:

- TT1000: remote 1000 metres, 9 stimulation levels and 3 modes, for 2 dogs.


Pro Trainer range:

- PT3000: remote 3000 metres, 18 stimulation levels and 8 modes, for 2 dogs.
- BEAGLE MASTER: remote 4000 metres, 18 stimulation levels and 6 modes, 4 dogs.


You can use as many '**Finger Kick**' as there are stimulation buttons on the remote, i.e.:

- 4 for the Pro Trainer (PT3000 and Beagle Master)
- 2 for the TT1000

Functioning

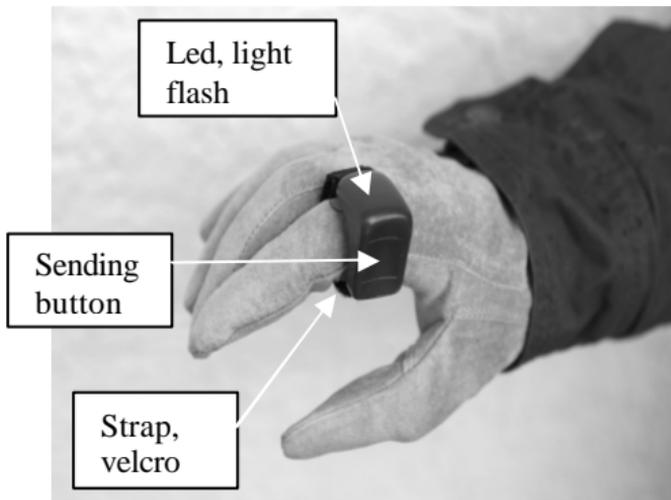

The "**Finger Kick**" uses the remote as relay for long distance. So it is important that the "**Finger Kick**" is in the remote's range, i.e. less than 5 metres.

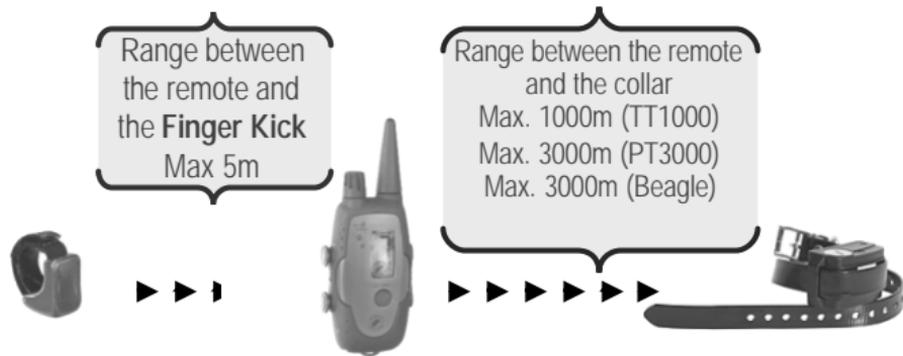

We advise you to place the remote in one of your pocket.

Caution, the range of the remote (distance remote-collar-receiver) may be reduced if you place the remote in a bad place (at the bottom of a bag, in the knee pocket, ...)

Remark:

The body may act as a barrier to the wave spread between the "**Finger Kick**" and the remote.

Initialization

To use the "**Finger Kick**", it is important to link it with the button of the remote.

Procedure:

1. On the remote, push simultaneously on the chosen button and the programming button (central button for the PT3000 and BEAGLE MASTER or lower button for the TT1000).
2. Push until the LCD screen flickers.
3. Push more than one second on the button of the "**Finger Kick**". CAUTION, you have to do that during about ten seconds. In case of failure, begin again on step 1.
4. When the LCD screen stops to flicker, the "**Finger Kick**" is connected to the button of your remote.

Remark:

1. The collar-receiver has to be synchronized to the remote to use the "**Finger Kick**"
2. The receiver must be on more than 50 cm of the remote to ensure a good connexion between the two elements.
3. To connect the "**Finger Kick**" to **another** remote, you must take away the previous remote from at least six metres and begin again the initialization procedure.

Use

Push on the button of the "**Finger Kick**" as you do it to use the remote. There is no button "on-off". When you push on the button, you engage automatically the functioning.

From the last pushing, the system reacts instantaneously at every touch. After ½ hour in stand-by, the react time is approximately of one second.

After 4 hours in stand-by, you must reactivate the system by pushing on a touch of the transmitter.

Help

- When you push on the button, you must see a light flash
In case of no flash, the battery of a lifetime expected from 7 to 10 years in normal use, is certainly out of order. Please, return the device to your distributor.
- A light flash appears when you push on the button, but nothing happens:
 - Initialize the "**Finger Kick**" to the remote,
 - Initialize a receiver to the remote (see remote user's guide).

Technical characteristics

Dimensions	27x30x17 mm
Weight	6 gr
WaterProof	
Battery	CR1025, 3V 30mAh
Frequency	2.4GHz
Power	<1mW

CONFORMITY

All electronic dog training equipment designed and supplied by Martin System has been subject to European conformity tests. Please consult local competent authorities before any use outside the countries of the EU.



RECYCLING



The regulations state that all waste electrical and electronic equipment must be recycled. If you have no further use for your dog training equipment, or it is irreparable, you must not dispose of it in the normal household waste, but return it to your dealer, or if this is not possible, contact our customer services department for further information.

**Manufactured in accordance with the instructions of the
ECMA**